


## 9025-XP Adjustment Locations Internal View (electronics main board)

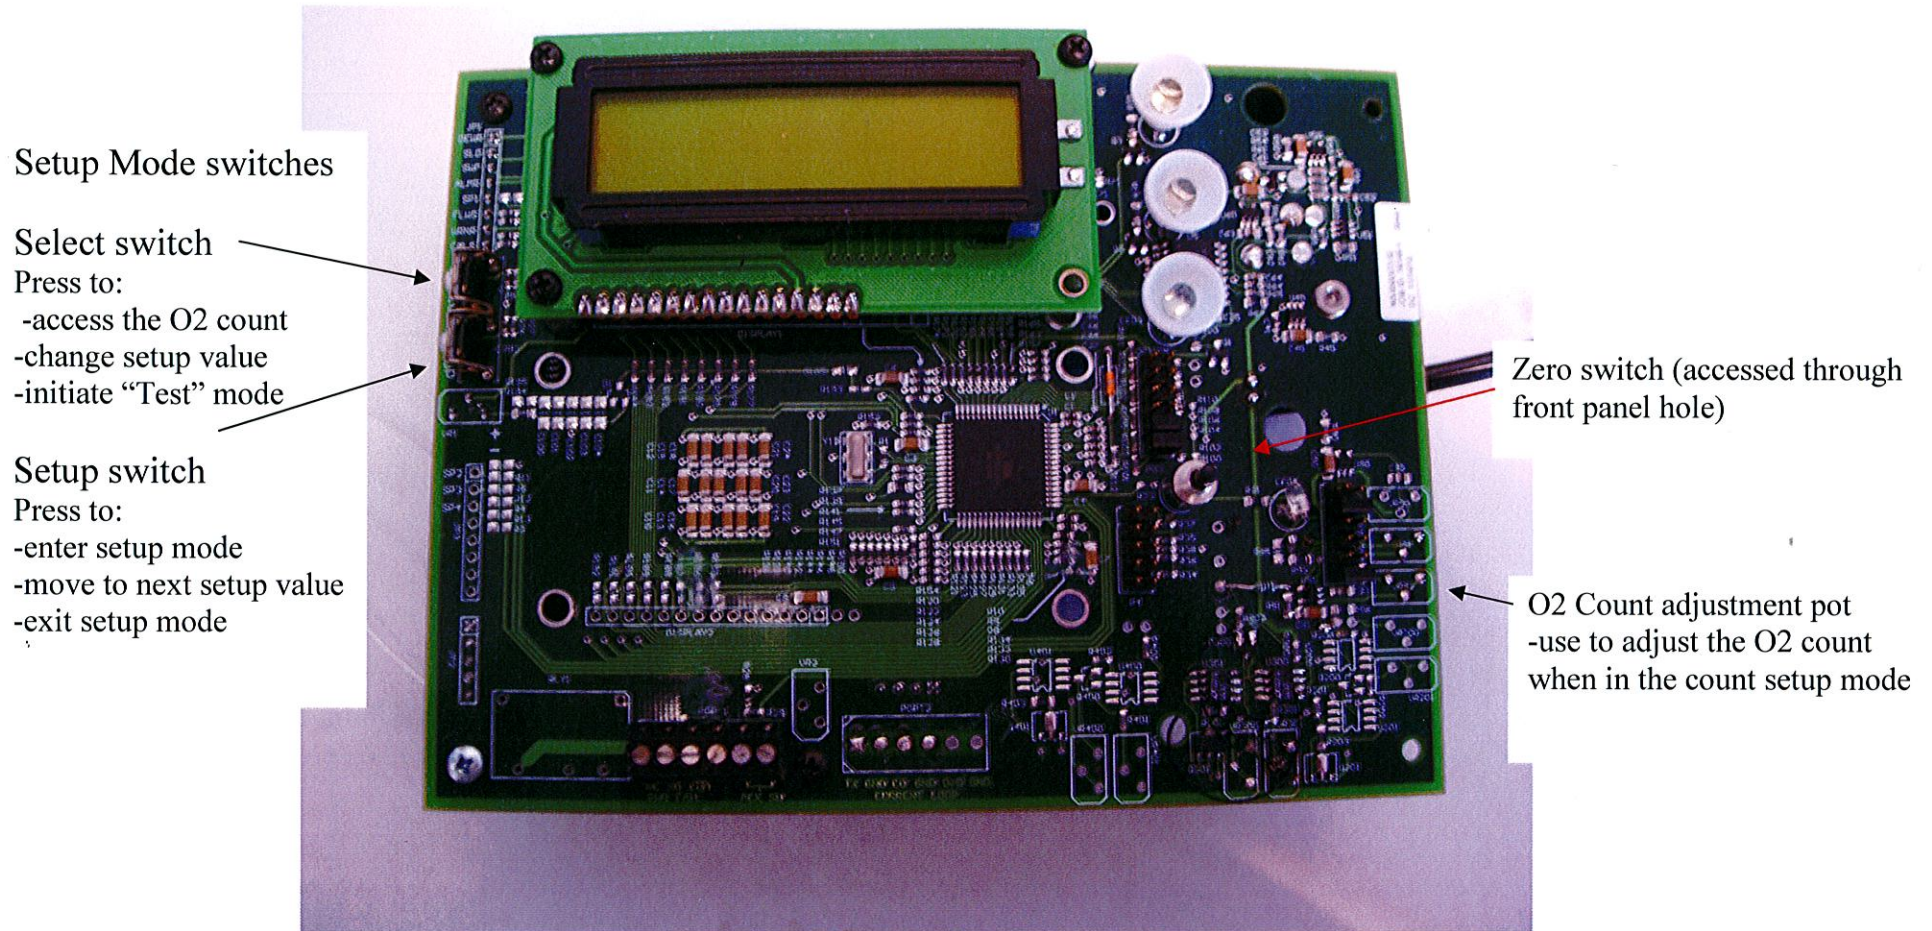

The "Setup" mode switches are located beneath the front panel on the left side of the instrument (RAM). Pressing the bottom switch will put the unit into the "Setup" mode, where certain parameters can be accessed and changed. It is not recommended to change the setup values from the factory settings. To adjust the O2 sensor count (necessary after changing O2 sensor), press the top "select" switch while the unit is in the standard run mode (displaying sensor readings). Once the top switch is released, the display will show "O2 199" or some other value. Adjust this reading until it reads "O2 200" (readings from 198 to 200 are acceptable) using the O2 count adjustment pot (bottom most pot). After the correct count reading is shown, press the bottom (setup) button to exit from the O2 count mode.